


Installation Instructions

Cat. No. TD1724 Transaction Drawer

24" COUNTER ON TOP OF THE WALL

INSTALLATION INSTRUCTIONS:

1. Notch the wall below the window opening using the measurements shown to the right.
NOTE: deduct counter thickness from the depth measurement.
2. Attach counter on top of window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2, 3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.

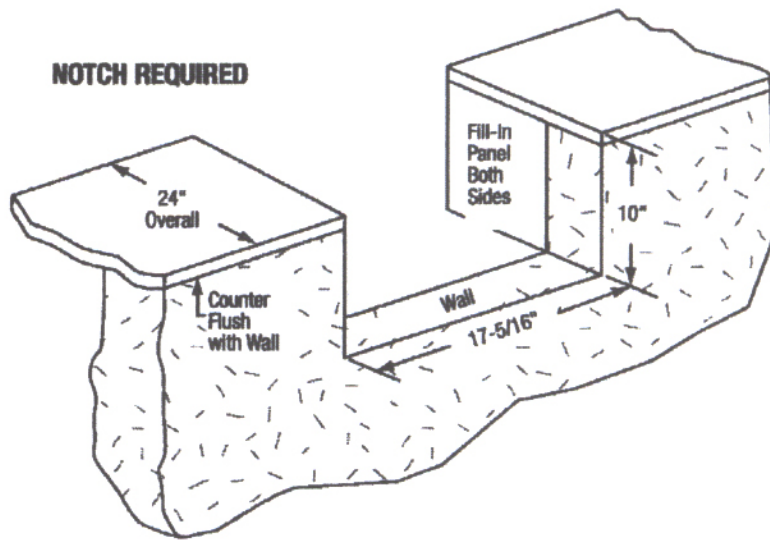

26" OR DEEPER COUNTER ON TOP OF THE WALL

INSTALLATION INSTRUCTIONS:

1. Notch the wall below the window opening using the measurements to the right. NOTE: deduct counter thickness from the depth measurement.
2. Attach counter on top of window opening and secure fill-in panels below the counter.
3. Place the unit in the opening and shim for proper fit. Slide drawer open and drill holes through both sides and the back of the box and secure with screws into the fill-in panels. If additional securing is necessary, see steps 2,3 and 4 of the "Under Window, No Counter" on page 2.
4. Lift the Lexan Lid and attach the Stainless Steel Slide Handle (illustrated instructions on page 2). Insert locking pin in the hole to secure the drawer.
5. Caulk any gaps between the wall and the unit to complete the installation.

