

Mounting Suggestions:

There are two suggested methods of installing Acrylic Dome Mirrors: Screw Mount or Pendulum Mount. Select the best method based on the intended location and use of your mirror.

Required Tools:

Electric Drill, Screwdriver

SCREW MOUNT


1. Position Acrylic Mirror Dome against ceiling, wall or other suitable substrate to ensure proper anchoring. Locate desired position and mark location of each hole.
2. Drill pilot hole for each screw location.
3. Use flat head or pan head screws (not supplied) to fasten the Acrylic Mirror Dome to the ceiling or wall. Caution: Do not overtighten screws as it may cause the acrylic flange to crack or break.

PENDULUM MOUNT


1. Insert 'S' Hooks (not supplied) thru pre-drilled holes in Acrylic dome Flange
2. Attach chain or cord (not supplied) to 'S' Hooks
3. Determine desired location to hang Acrylic Mirror Dome, drill pilot hole in ceiling, fasten screw to chain and attach to ceiling.

CLEANING INSTRUCTIONS

- **DUSTING:** Clean with soft, damp cloth or chamois, wiping gently.
- **WASHING -** Wash with mild soap or plain water. Use soft cloth or tissue.

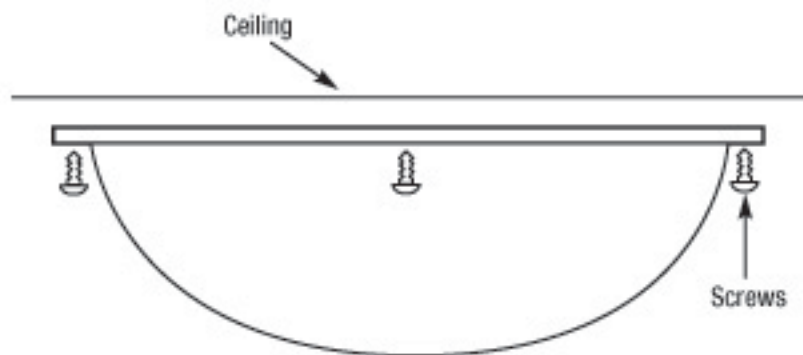

SCREW MOUNT

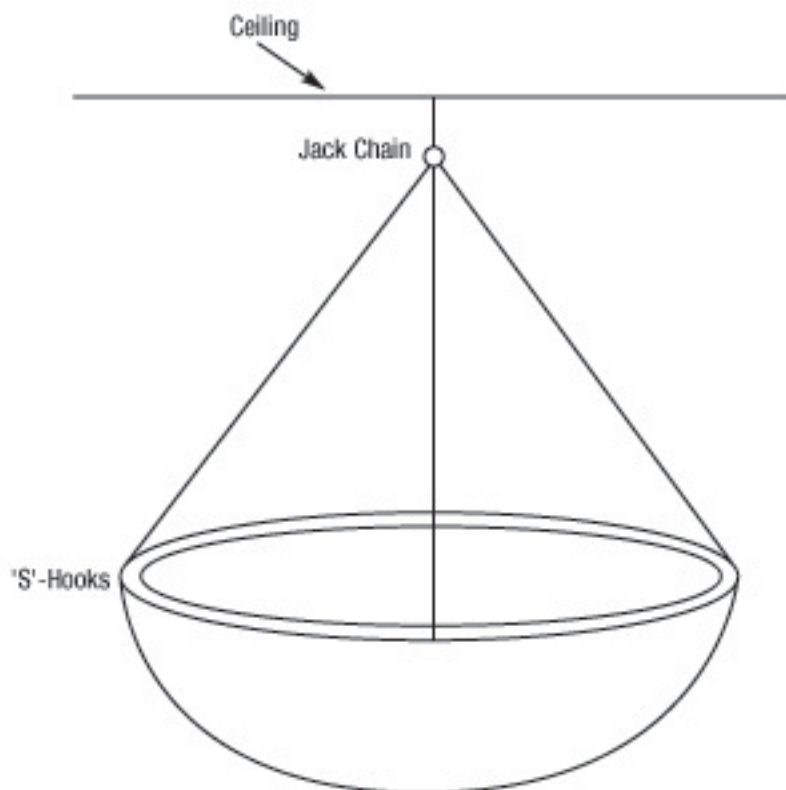

PENDULUM MOUNT